




- 1 Connect the Elevate and the adapter to the **Port B** connection on the Ag Leader 6500/7500 cabling

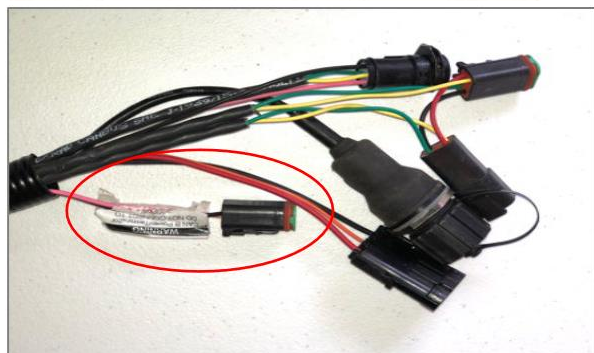

- 2 Connect the Power Tee to the Can B power / Terminator connection on the Display cable



- 3 User must extend the length of the cable as far away from the receiver as possible.



- 4 Enter the Setup menu by tapping the wrench icon




- 5 Enter the GPS/Guidance Setup menu by pressing the receiver and wheel icon at the bottom





6 Select the wrench icon next to “Autodetect”

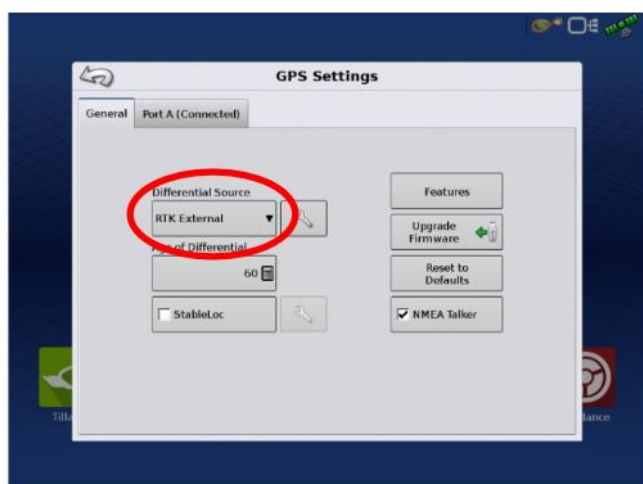

7 Ensure the Differential source is set to “RTK external”

Confirm RTK fix by returning to the home screen and checking for a green satellite icon in the upper right