



Cable Installation

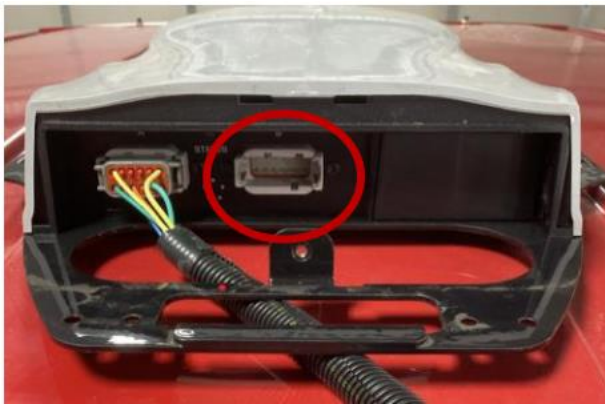

- 1 Install the elevate cable into **Port B** of the receiver


Ensure cord is firmly attached and pins are clean of debris

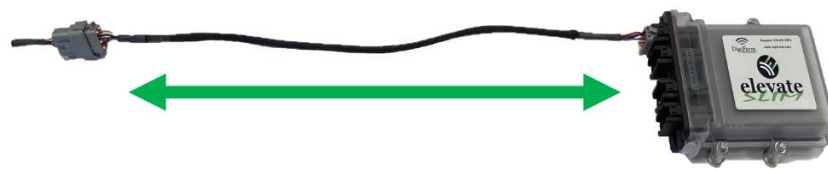

- 2 User must extend the length of the cable as far away from the receiver as possible.




- 3 Select the Menu icon on the top bar, then select **GNSS & Guidance**

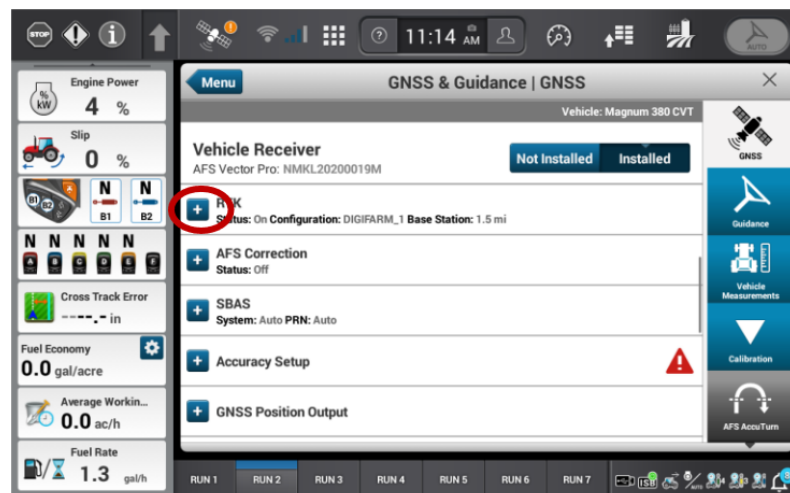

- 4 Select the plus icon next to RTK



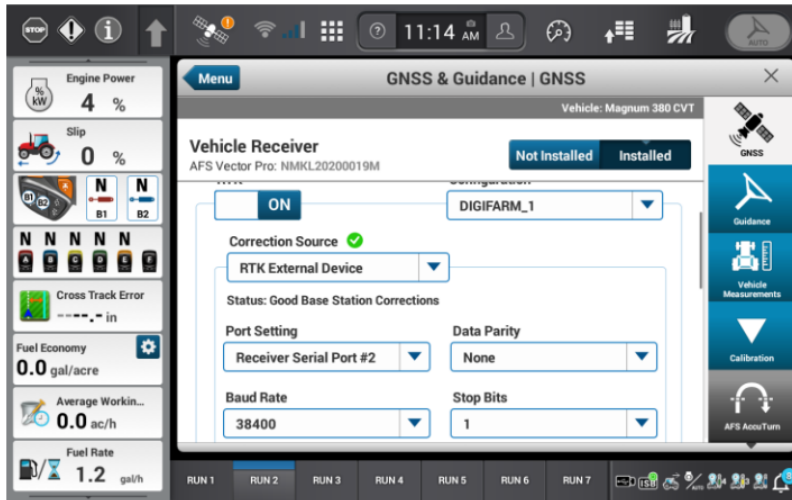

5 Turn RTK on, Set a new configuration and name.

Use the drop downs to select the following settings:

**Correction Source = RTK External Device.**

**Port setting = Receiver serial port #2.**


**Data parity = None.**

**Baud rate = 38400.**


**Stop bits = 1**


**Protocol = RTCM 3**

scroll down

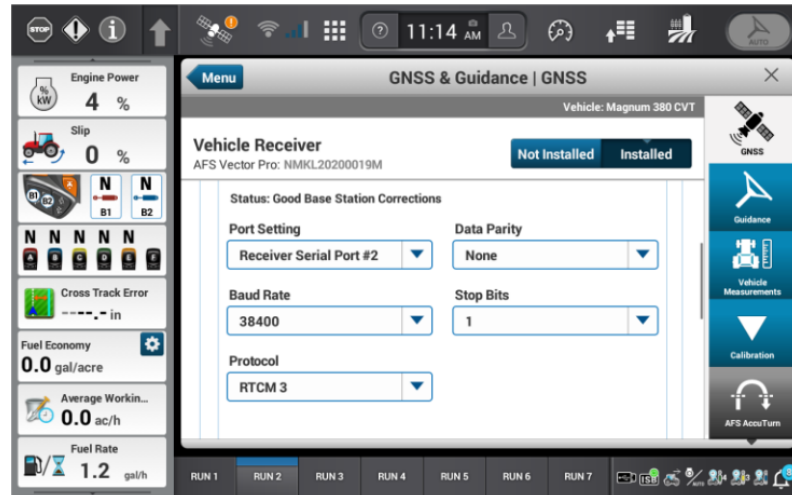

6 Minimize the RTK menu and select the plus next to the GNSS Position output.

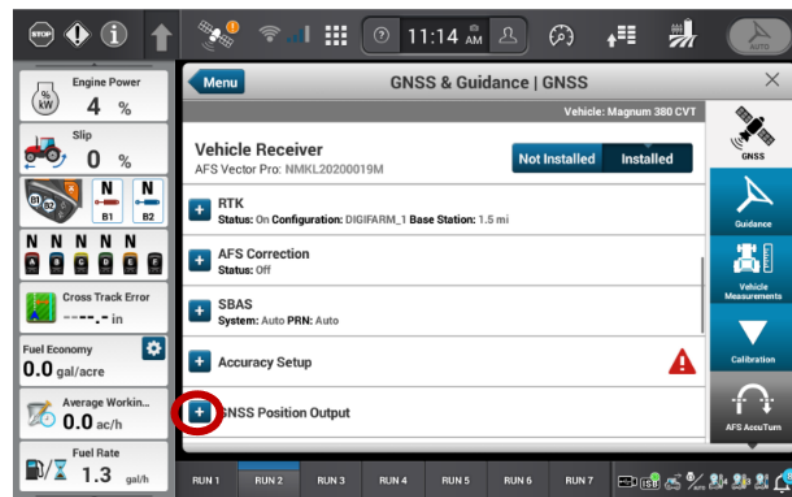

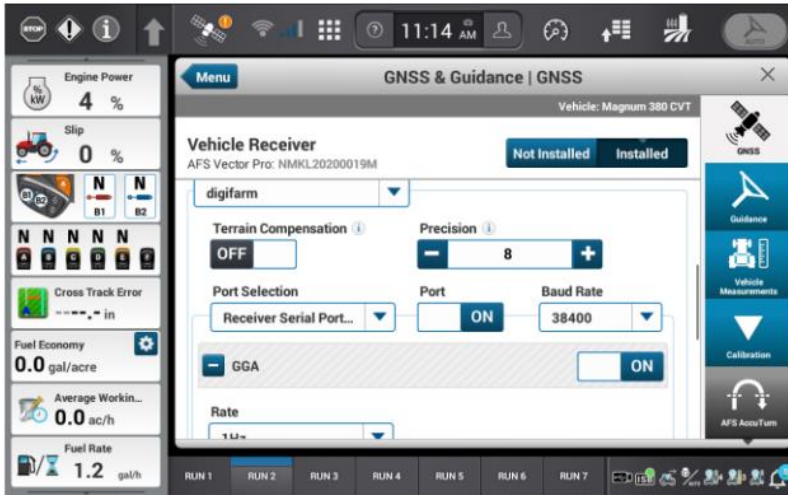

- 7 Create a new output configuration with the following settings:

**Terrain Compensation = OFF**

\*(this is only for the output, this does not impact the terrain compensation for the steering system).


**Port Selection = Receiver Serial Port #1.**

**Port = ON**

**Baud Rate = 38400.**

**GGA = ON**

**Rate = 1Hz**

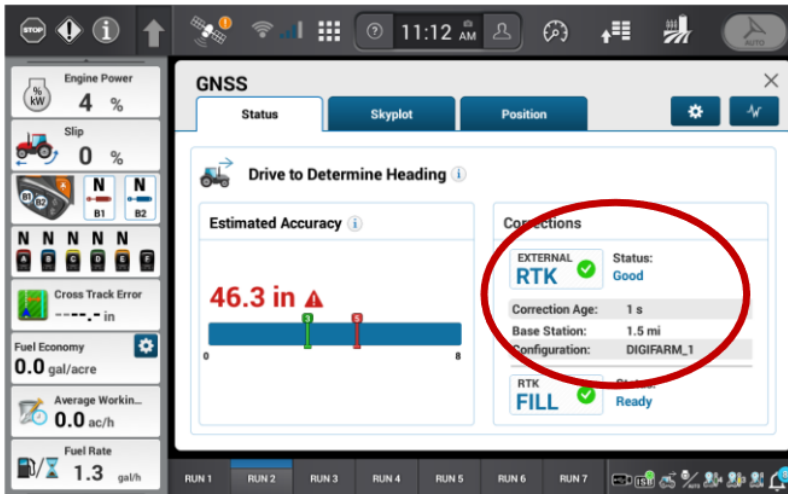

- 8 Select the satellite icon from the top bar and confirm RTK fix.