

Technical Support 319.531.7574 support@digifarm.com



## Quick Reference Card John Deere SF6000 Installation & Set-up



1 Unplug the receiver cable from under the cab. Plug-in in T-cable to the male connector on cab and female end to receiver.



Run the long end of the cable to the roof and plug into the modem in port A.



User must extend the length of the cable as far away from the receiver as possible.




Use the included alcohol swabs to clean the mounting area. Peal back the sticker tabs and press the mounting plate firm on the cleaned cab roof.



4 Place elevate slim on the installed mounting plate with the magnets facing down.

## Quick Reference Card John Deere SF6000 Installation & Set-up

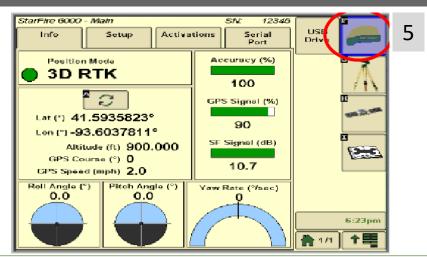


Go to the Starfire Main settings page & select the **GPS Receiver** icon in the top right corner (**F**).



Go to the serial port tab at the top and confirm the following settings:


Baud Rate = 38400
Output rate = 1Hz
GGA box check marked

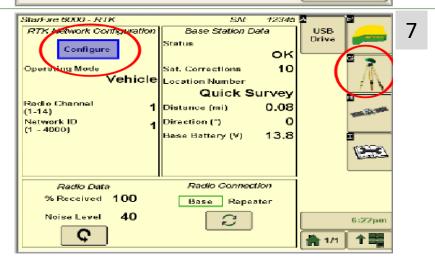


Continue to the **RTK Setup** page (**G**). Under RTK Network Configuration press **CONFIGURE**.



## Quick Reference Card John Deere SF6000 Installation & Set-up

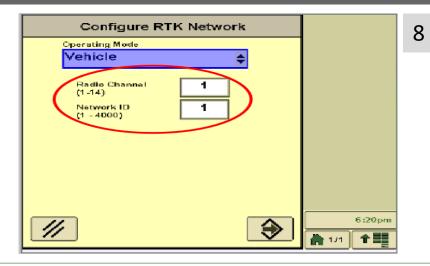

Under Operating Mode select **VEHICLE**. Then set the Radio Channel and Network ID to **1** 

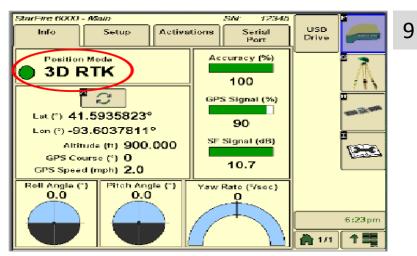

Return to the main Settings page and confirm RTK fix