


Cable Installation




- 1 Install the RS1 adapter between the factory cabling and the RS1, Then connect the Elevate cable to the RS1 adapter.

Ensure cord is firmly attached and pins are clean of debris.

- 2 User must extend the length of the cable as far away from the receiver as possible.

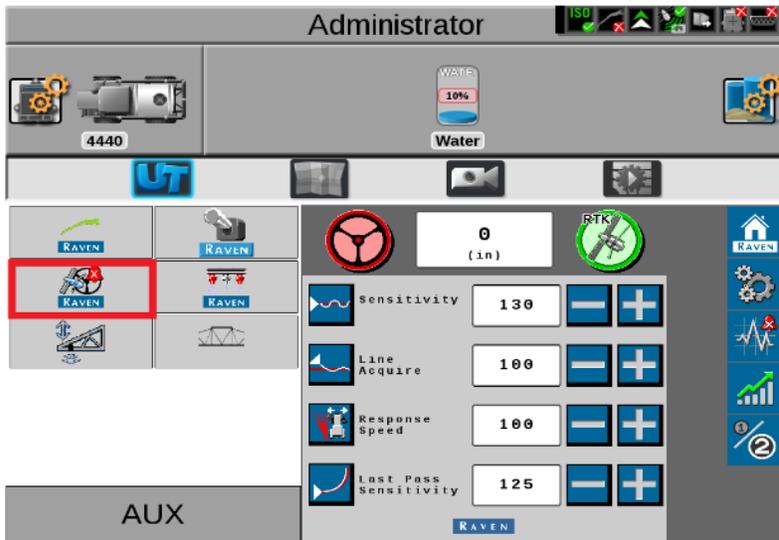


- 3 Once the display is on and the UT has found all the ISOBUS components select the RS1 Icon.

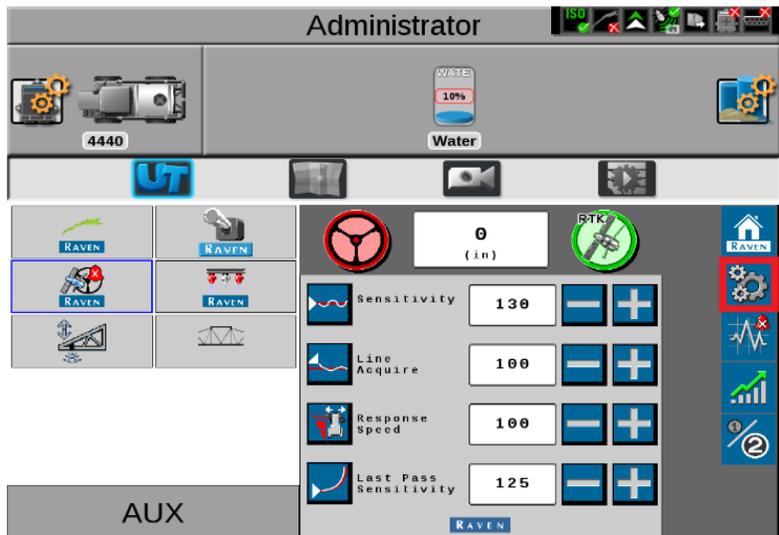


- 4 Select the Setup icon.




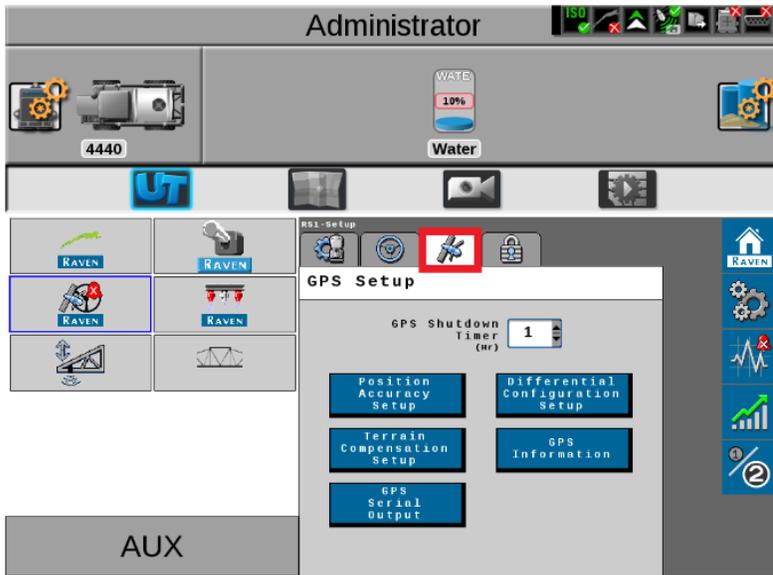

5 Select the GPS Setup icon.

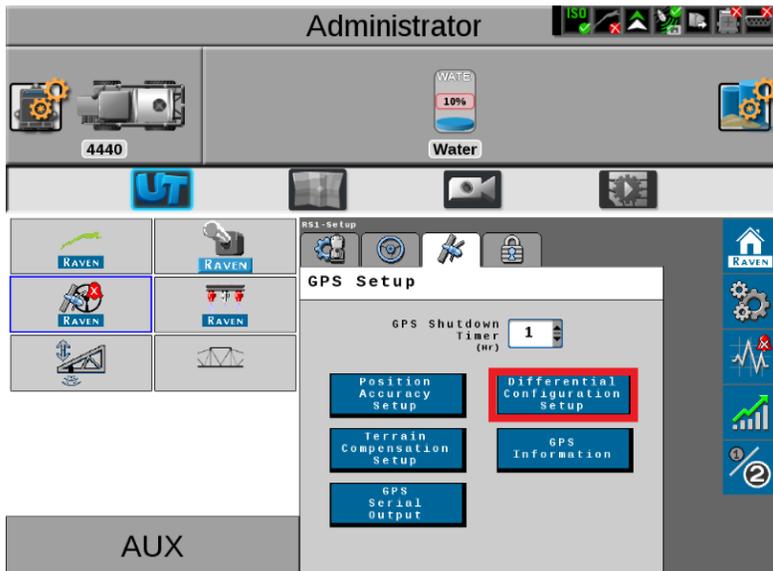

6 Select **Differential Configuration Setup**.

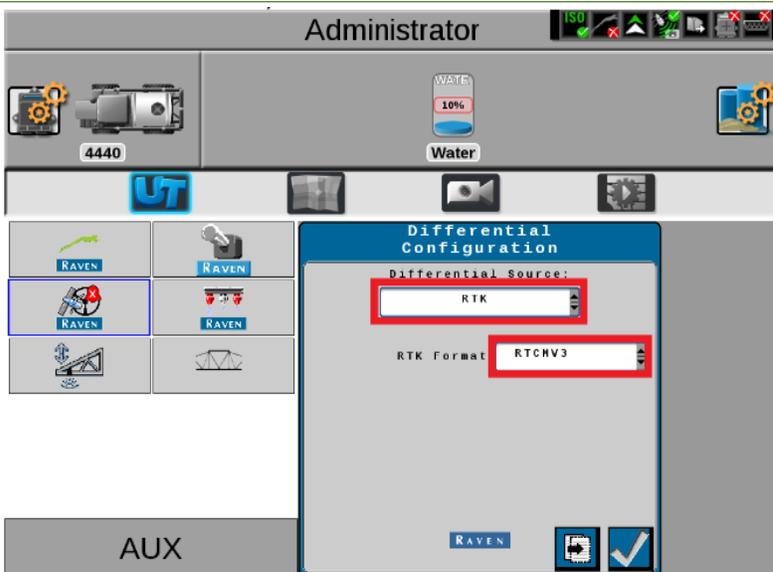


7 Confirm the following settings:


Differential Source = RTK
RTK Format = RTCMV3

Then select the checkmark to confirm.



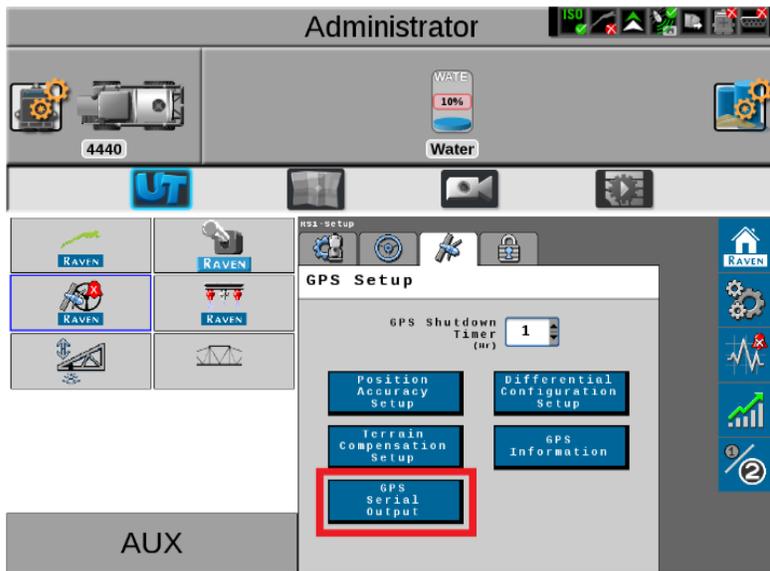

8 Select **GPS Serial Output**.

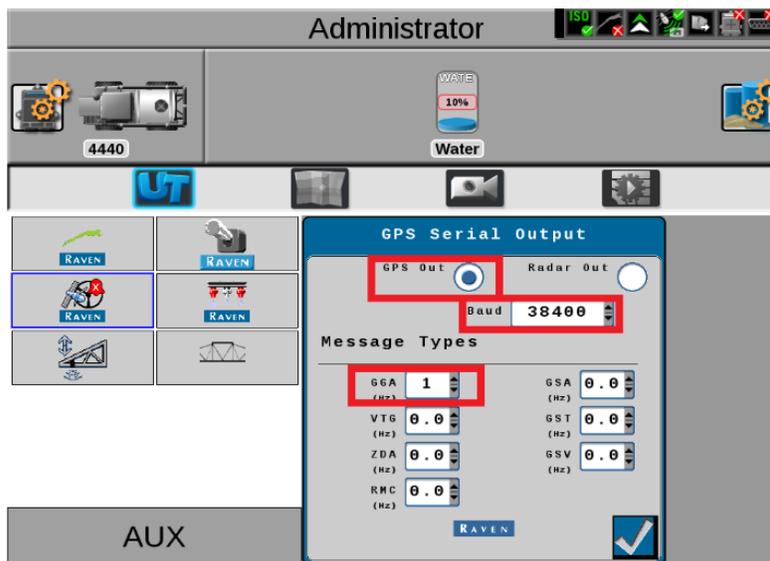

9 Confirm the following settings:


GPS out

Baud = 38400

GGA = 1

All others are at 0.0

Select the checkmark to confirm.

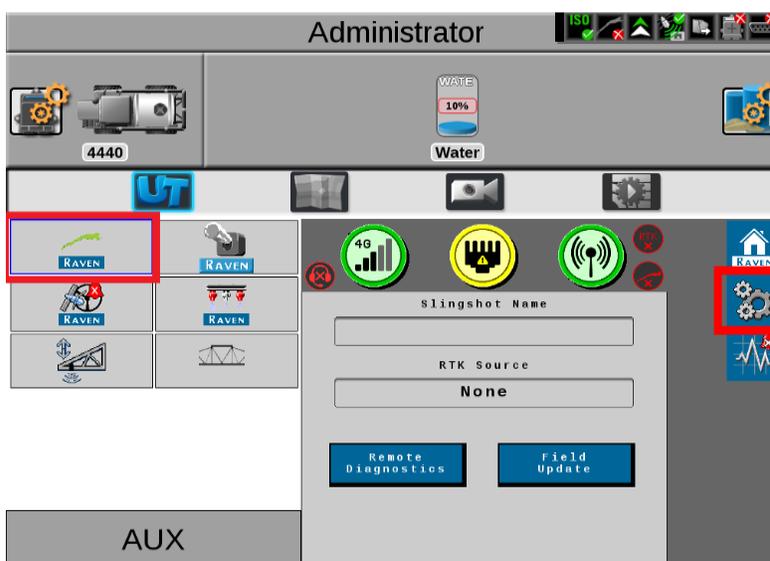


10 Select Slingshot from the UT.



Then select the Setup icon on the right.



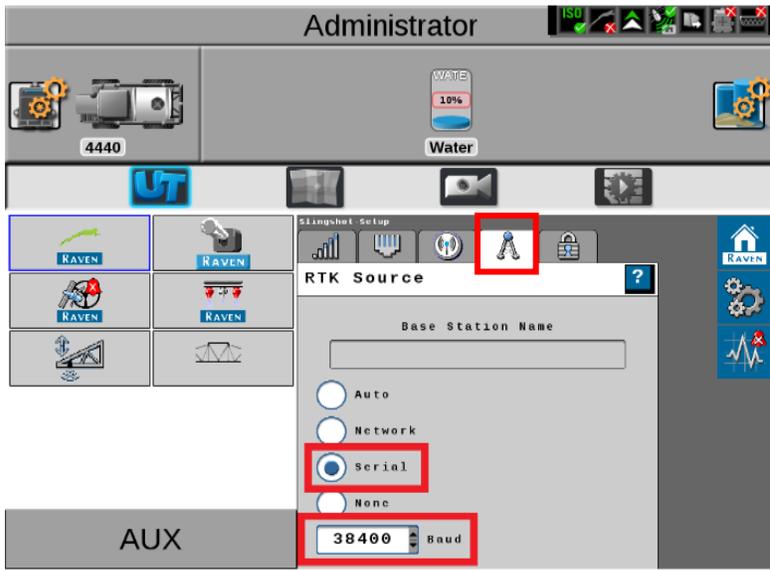


11 Select RTK Source.



Confirm the following settings:

Set to Serial
38400 = Baud

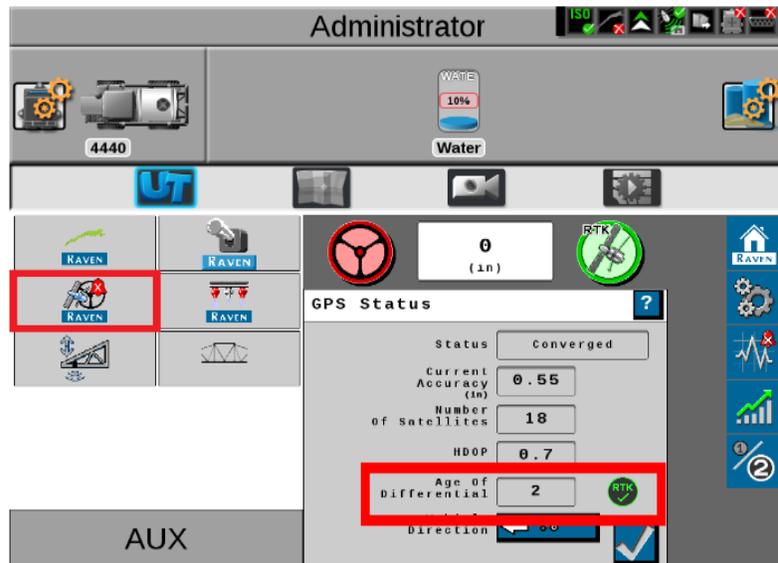

12 Return to the RS1 UT screen.



Confirm RTK in the lower right

