



Cable Installation

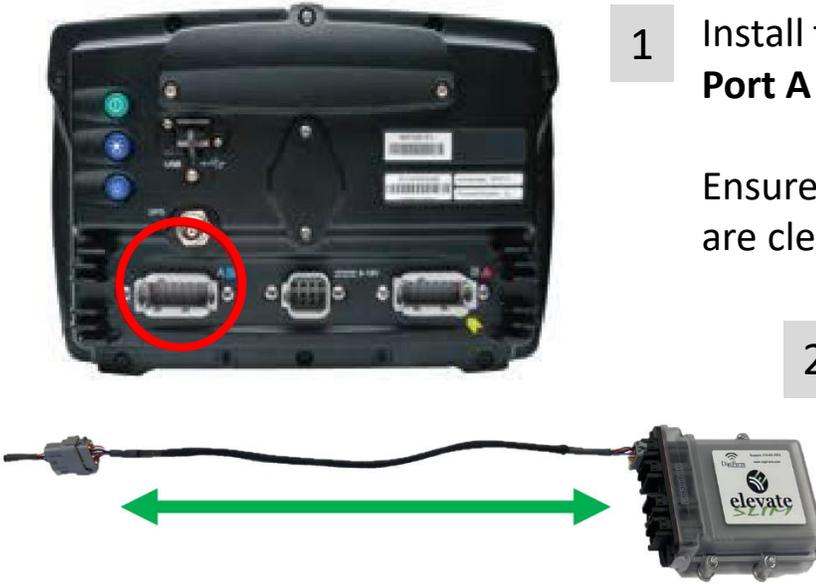

- 1 Install the elevate cable into **Port A** of the receiver

Ensure cord is firmly attached and pins are clean of debris


- 2 User must extend the length of the cable as far away from the receiver as possible.

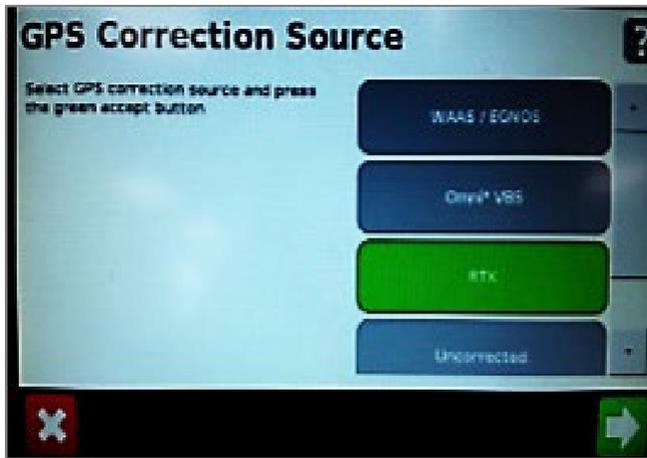

- 3 Select the following to reach the GPS Correction Source screen:

Wrench (Settings) > GPS/GNSS > GPS/GNSS Setup


Select **RTK** as the GPS Correction Source and press the green arrow

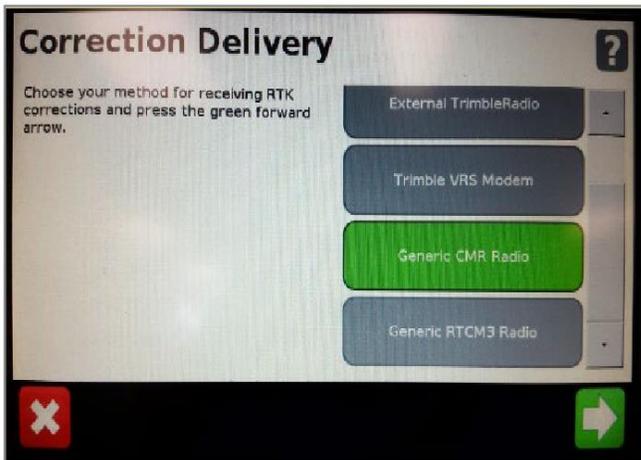

- 4 On the Correction Delivery page select **Generic RTCM3 Radio**


Press the green arrow



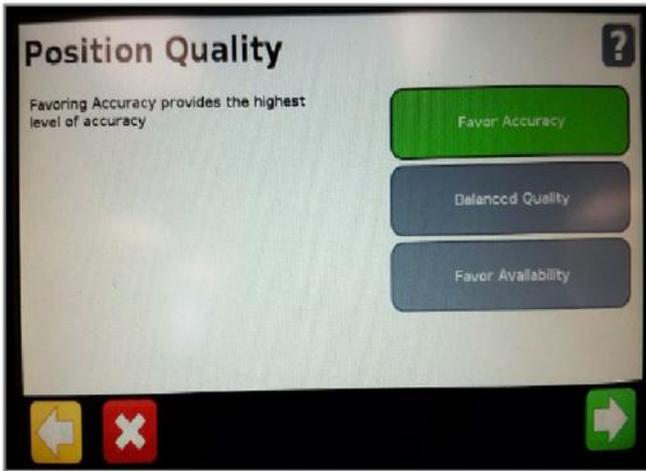

- 5 On the Position Quality page, select **Favor Accuracy**

Press the green arrow

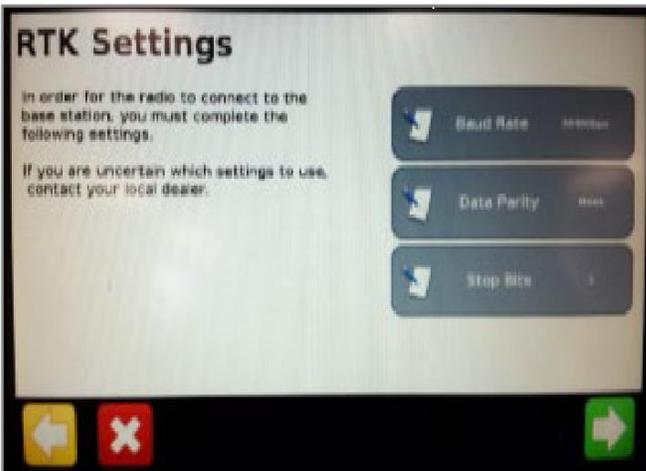

- 6 On the RTK Settings page, confirm the following settings:

Baud rate = 38400

Data Parity = None

Stop bits = 1


Press the green arrow



- 7 Select **Yes** to use xFill

Press the green check mark




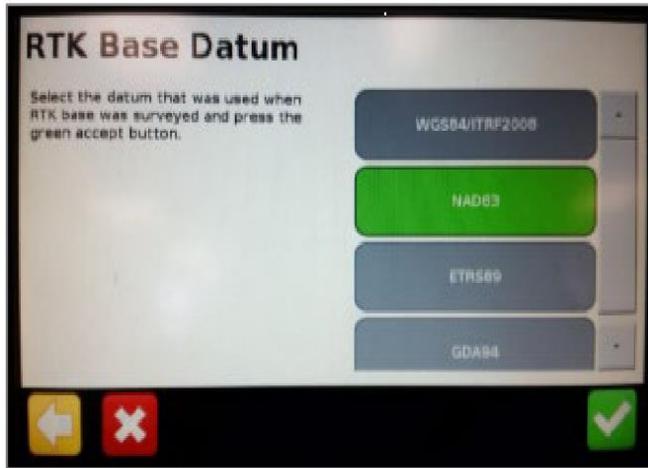

8 On the RTK Base Datum page, select **NAD83** as the Datum Type

Press the green check mark

9 Return to the General Settings menu > System > Advanced > **enable** the Advanced User config > enter Advanced User config > Advanced Port setup

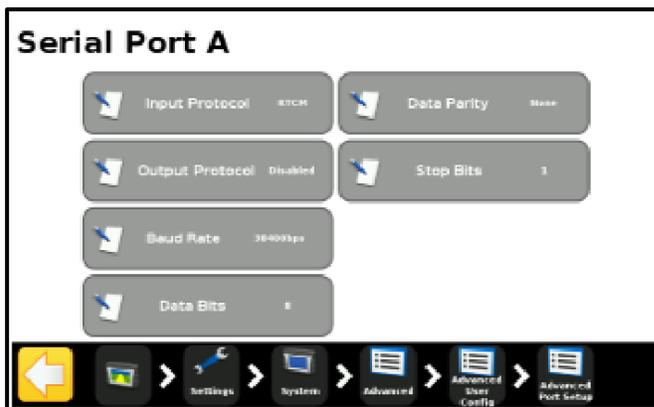

10 Confirm the following port settings for Serial Port A

Input Protocol	RTCM	Data Parity	None
Output Protocol	Disabled	Stop Bits	1
Baud Rate	38400		
Data Bits	8		



11 Confirm RTK by returning to the mapping screen and confirming a green satellite icon in the top left corner.