



- 1 Connect the Beacon to the AGI 4 with the adapter cable and black connector on the back of the receiver



- 2 Navigate to the Wrench icon, then System, then Correction level

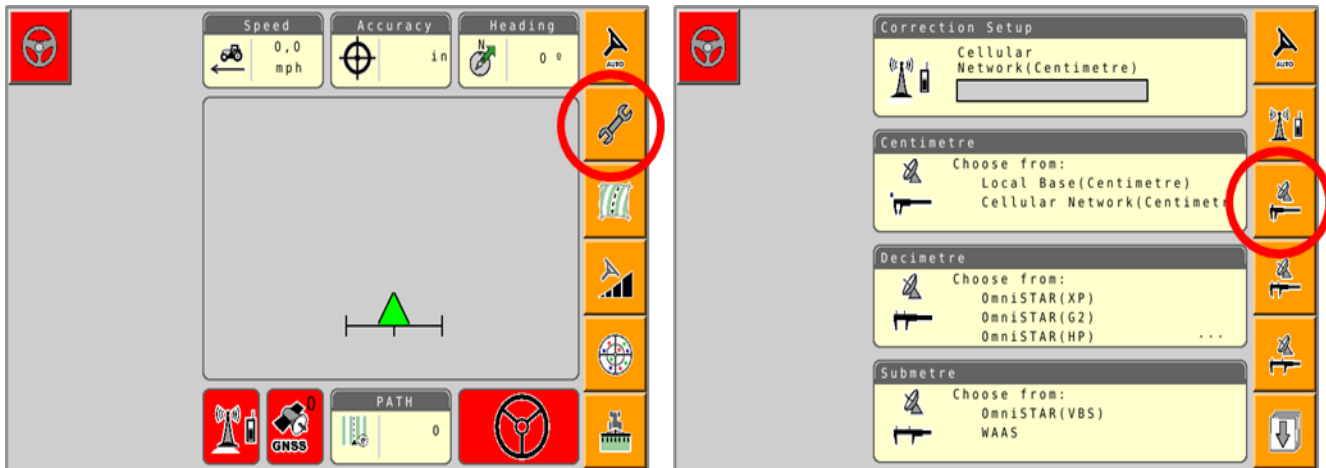

- 3 Select Cellular Network; checkmark "Use external radio"; then select the checkmark on the right

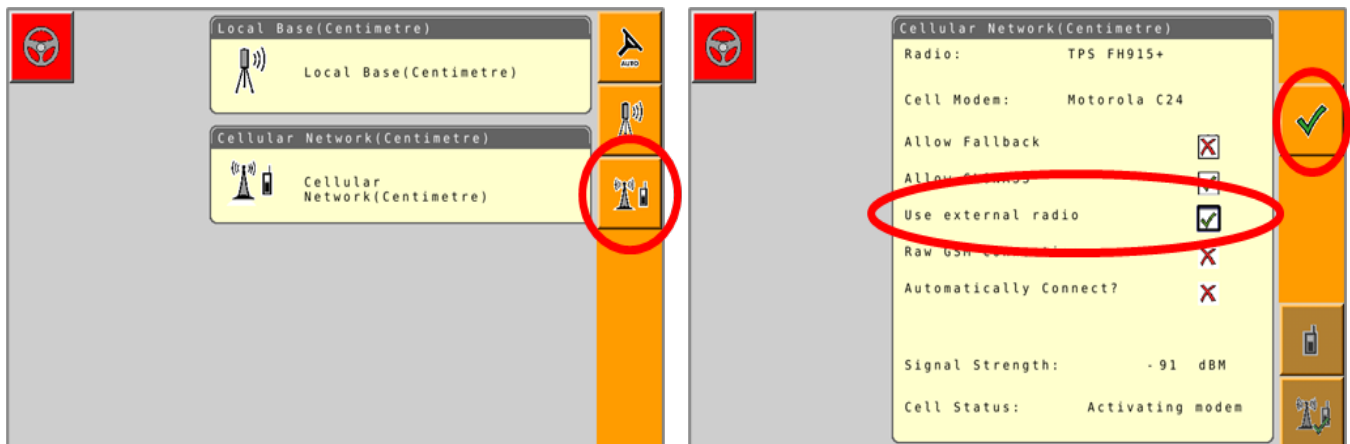

- 4 Set the Correction type to “RTCM3.X”; Serial Port to “D”; Baud Rate to match the Beacon; Parity to “None”; & NMEA Rate to 10 seconds

