




- 1 Remove 3 screws & take off yellow dome.

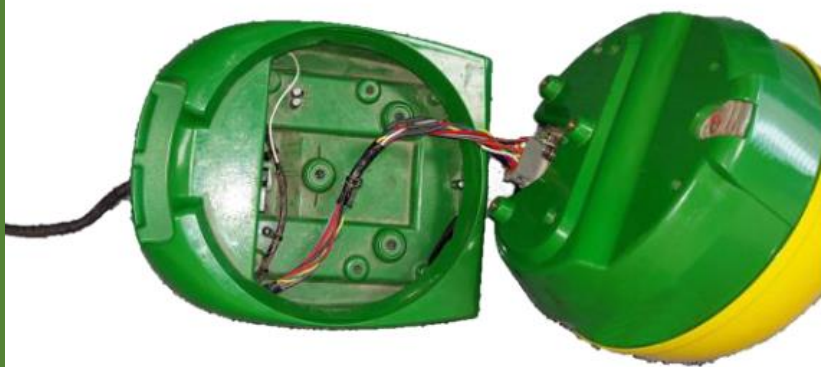

- 2 Carefully remove the yellow globe & separate from the base..

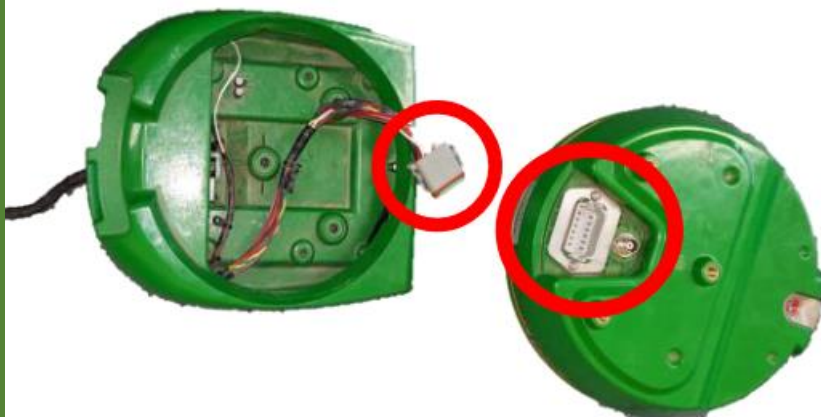


- 3 Unplug the cable

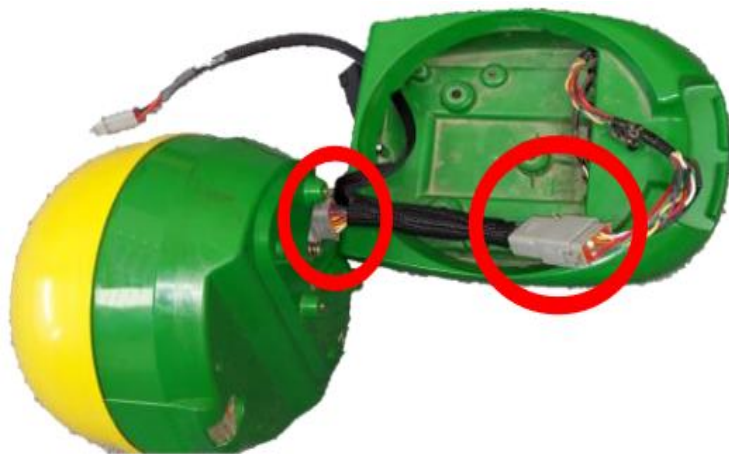

- 4 Plug the male end of the T cable into the globe then plug the female end into the connector on the base.



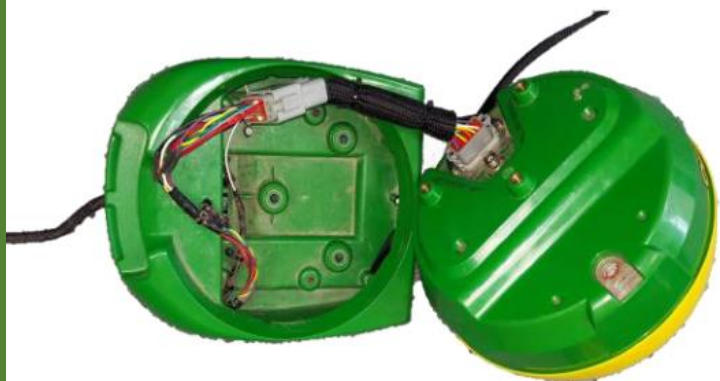


- 5 Thread the long end of the T cable through the hole in the base.




- 6 Gently set antenna base on shroud. Re-install the base screws.



- 7 Use the included alcohol swabs to clean the mounting area. Peel back the sticker tabs and press the mounting plate firm on the cleaned cab roof.

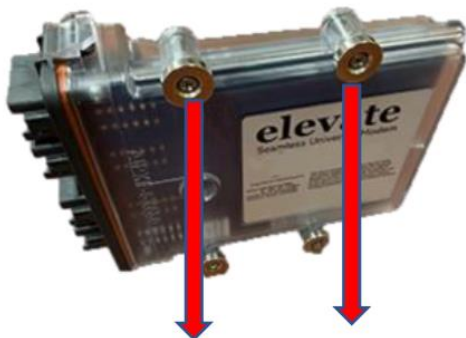


- 8 Place elevate slim on the installed mounting plate with the magnets facing down.

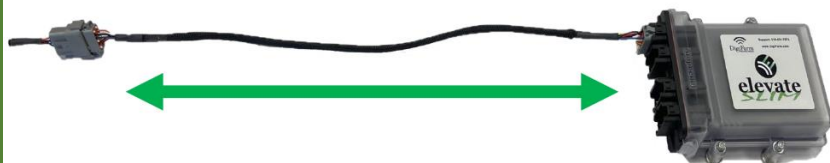


- 9 User must extend the length of the cable as far away from the receiver as possible.



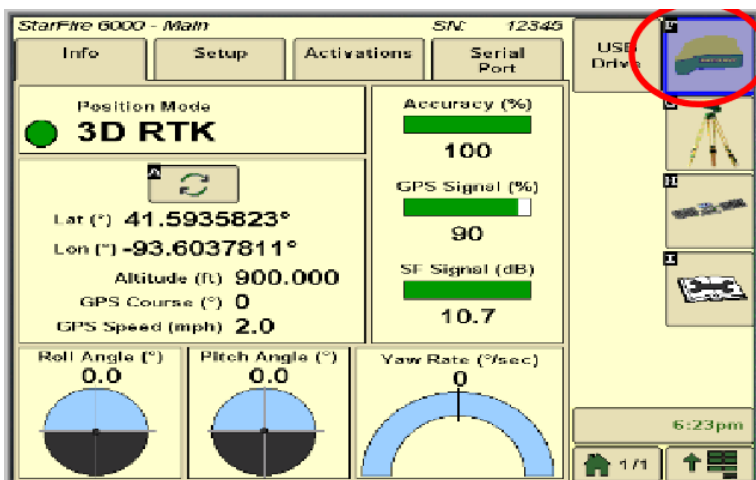

- 10 Go to the Starfire Main settings page & select the **GPS Receiver** icon in the top right corner (F).

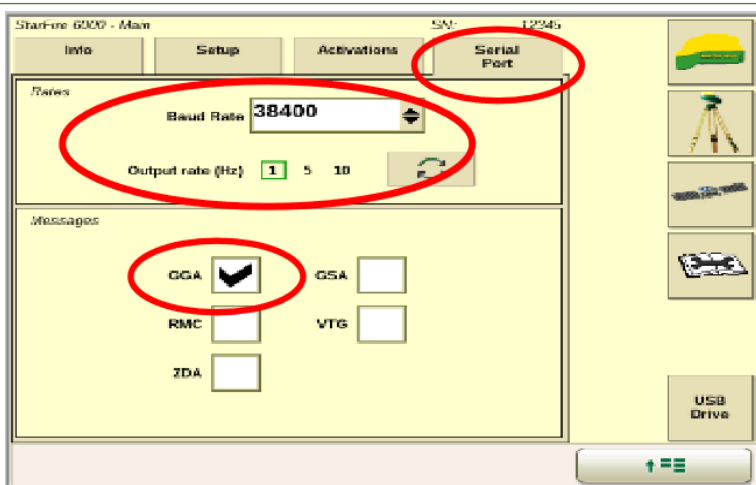


- 11 Go to the serial port tab at the top and confirm the following settings:

**Baud Rate = 38400**


**Output rate = 1Hz**

**GGA box check marked**

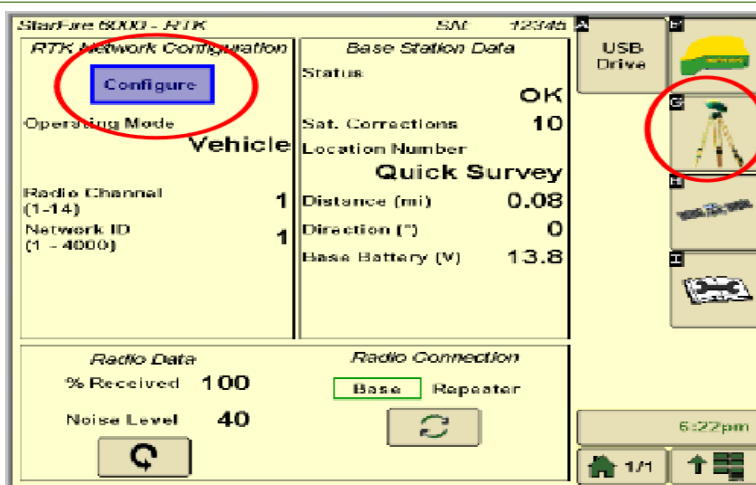


- 12 Continue to the **RTK Setup** page (G). Under RTK Network Configuration press **CONFIGURE**.



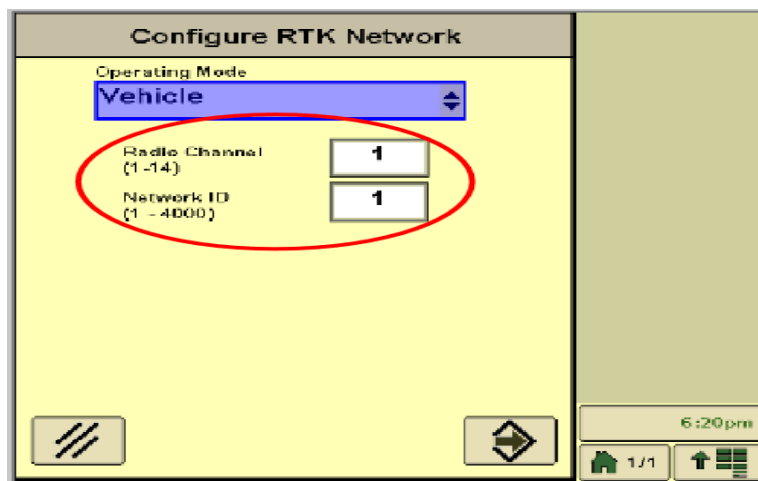

- 13 Under Operating Mode select **VEHICLE**. Then set the Radio Channel and Network ID to **1**

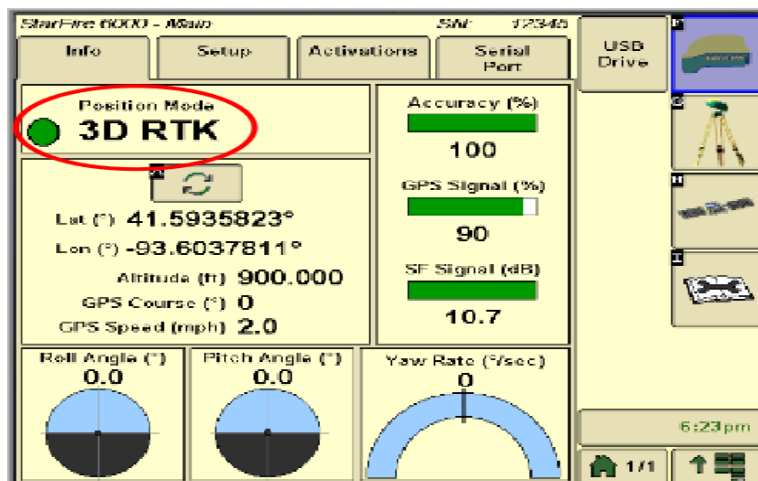

- 14 Return to the main Settings page and confirm RTK fix