Ag Leader InCommand & DigiFarm BR1 Mini Setup

[1] From **Home** screen, select the **Wrench** icon > **Steering Wheel**/ GPS receiver icon (near the bottom of the screen) > select **Ag Leader NTRIP setup**	[2] Select **Networking** (near the bottom left) > select the network named **digifarm** & enter password, **digifarm** > select the **Return** arrow (near the top left corner)
[3] Set up NTRIP profile Select the + to add a profile (name the profile anything the user chooses) Enter "**caster.godigifarm.com:3101**" (no quotes) in the server box (top of screen) When the streams box populates, select the **VBN mountpoint** that matches your receiver	[4] Enter your VBN username and password (from the DigiFarm email) Select the **green checkmark** (near the bottom of screen) Return to **Home screen** & select the **Satellite** icon (top right of the screen) to confirm you have RTK
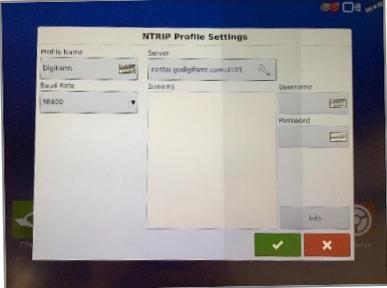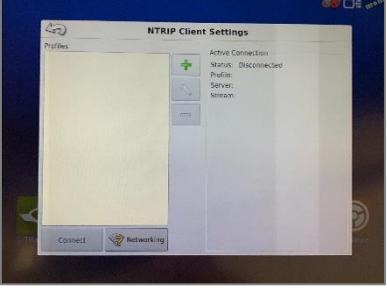
*NOTE: The **Receiver setup** must be completed according to the correct DigiFarm QRC

   digifarm.com/quick-reference-cards

*NOTE: An Ag Leader Display Aux cable is required for this configuration